

## **ODEON FLOOD MAXI - MEDIUM - MINI**


## **Installation Instructions**


FOR THE FOLLOWING MODELS:

ODEON FLOOD MAXI 15° RGBW ODEON FLOOD MEDIUM 15° RGBW ODEON FLOOD MINI 15° RGBW

ODEON FLOOD MAXI 25° RGBW ODEON FLOOD MEDIUM 25° RGBW ODEON FLOOD MINI 25° RGBW


ODEON FLOOD MAXI 35° RGBW ODEON FLOOD MEDIUM 35° RGBW ODEON FLOOD MINI 35° RGBW

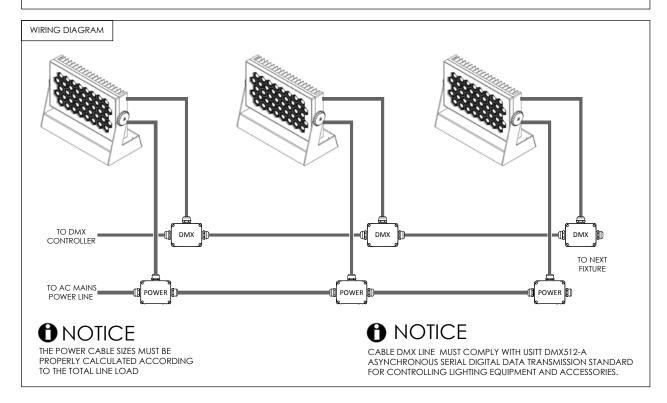

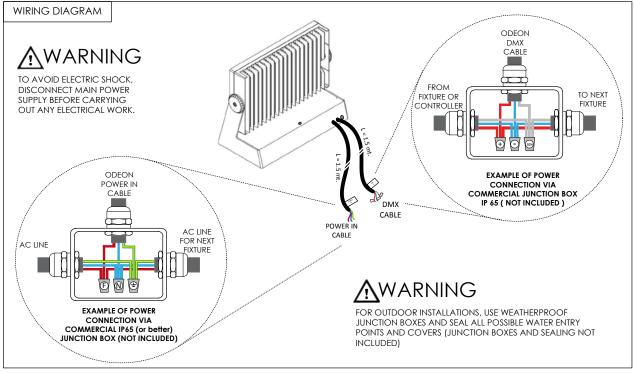






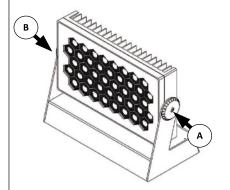




LOOSEN BY TURNING THE HEX SCREW COUNTER-CLOCKWISE AS SHOWN IN DRAWINGS  ${\bf A}$  and  ${\bf B}$ 

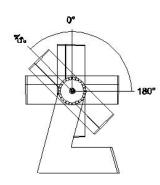

2 INSTRUCTION

TURN THE HEAD AS REQUIRED

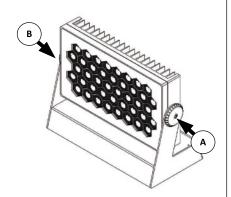

3 INSTRUCTION


Turn the hex screws clockwise to lock the head in the previously chosen position as shown in drawings  $\bf A$  and  $\bf B$ 



WARNING


ONLY LOOSEN SCREWS **A** AND **B** TO MOVE THE HEAD. THEY SHOULD NOT BE FULLY UNSCREWED. THE HEX-KEY IS NOT INCLUDED.



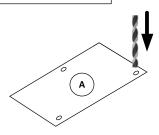


1 INSTRUCTION

USE THE HOLE TEMPLATE  ${\bf A}$  TO DRILL THE MOUNTING HOLES (E.G. FOR FASTENING WITH WALL PLUGS)

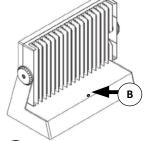


2 INSTRUCTION

LOOSEN AND REMOVE SCREW **B** TO UNLOCK THE BASE CASING

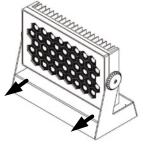


3 INSTRUCTION

PULL FORWARD AND EXTRACT THE BASE CASING

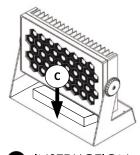


4 INSTRUCTION

FIT FRONT BASE FIXING SCREW  ${\bf C}$  AS SHOWN. THERE IS A FIXING SLOT AT THE FRONT

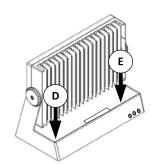

5 INSTRUCTION

FIT REAR BASE FIXING SCREWS **D** AND **E**AS SHOWN. THERE ARE TWO FIXING SLOTS
IN THE CORNERS, INSIDE THE BASE

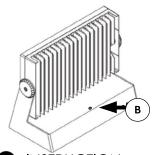

6 INSTRUCTION

REPLACE THE COVER AND FASTEN IT WITH PREVIOUSLY REMOVED SCREW **B** 



WARNING

THE SCREWS AND FIXING PARTS, LIKE WALL PLUGS, MUST BE OF A SUITABLE SIZE FOR THE KIND OF MOUNTING SURFACE SO THAT THE HEAD IS CORRECTLY FASTENED.



NOTICE

NONE OF THE FIXING PARTS, LIKE SCREWS AND WALL PLUGS, ARE INCLUDED